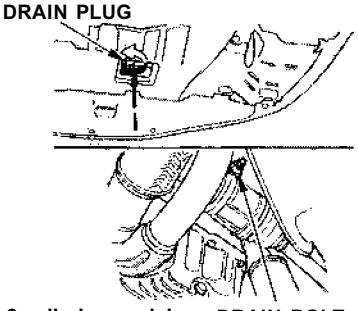

6-cylinder models

3. Loosen the drain plug on the bottom of the radiator. The coolant will drain through the splash guard. Loosen the drain bolt.

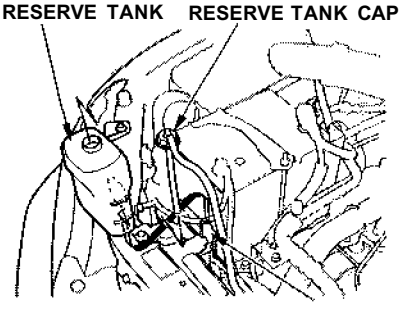

4. Remove the reserve tank from its holder by pulling it straight up. Drain the coolant, then put the tank back in its holder.

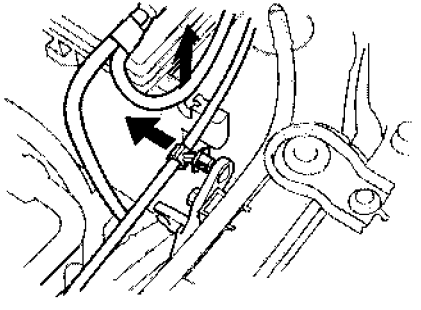

6-cylinder models

When removing the reserve tank, first remove the cruise control cable and the ground cable from their clips. After installing the tank back in place, put the cables back in their clips.

CONTINUED

Cooling System

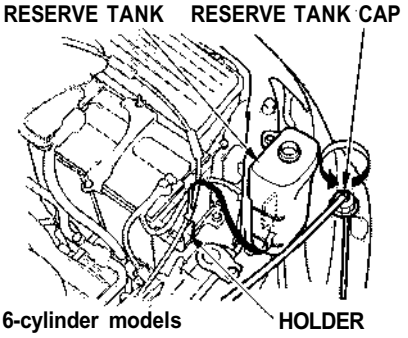

5. When the coolant stops draining, tighten the drain plug in the bottom of the radiator.

6. *4-cylinder models*
Put a new washer on the drain bolt, then reinstall the drain bolt in the engine block. Tighten it securely.

Tightening torque:
61 lbf·ft (83 N·m , 8.5 kgf·m)

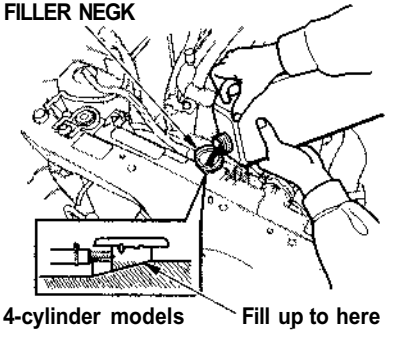

6-cylinder models
Tighten the drain bolt at the rear of the engine cylinder block securely.

Tightening torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

7. Mix the recommended antifreeze with an equal amount of purified or distilled water in a clean container. The cooling system capacity is:

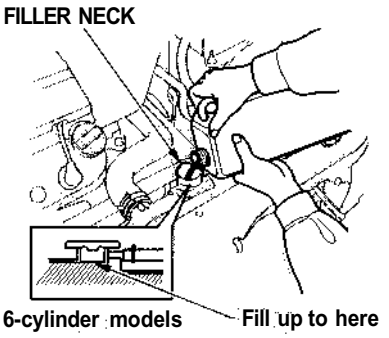

With 5-speed manual transmission:
1.45 US gal (5.5 ℓ , 1.21 Imp gal)
With automatic transmission:
1.43 US gal (5.4 ℓ , 1.19 Imp gal)
6-cvlinder models
1.48 US gal (5.6 ℓ , 1.23 Imp gal)